


# EXTERNAL DOUBLE EJECTION

ES Doble Expulsión Externa DE Externer Zweistufenauswerfer  
 IT Doppia Espulsione Esterna PT Dupla Extração Externa FR Double Éjection Externe

● Cad Insertion Point

# EY

EJECTION

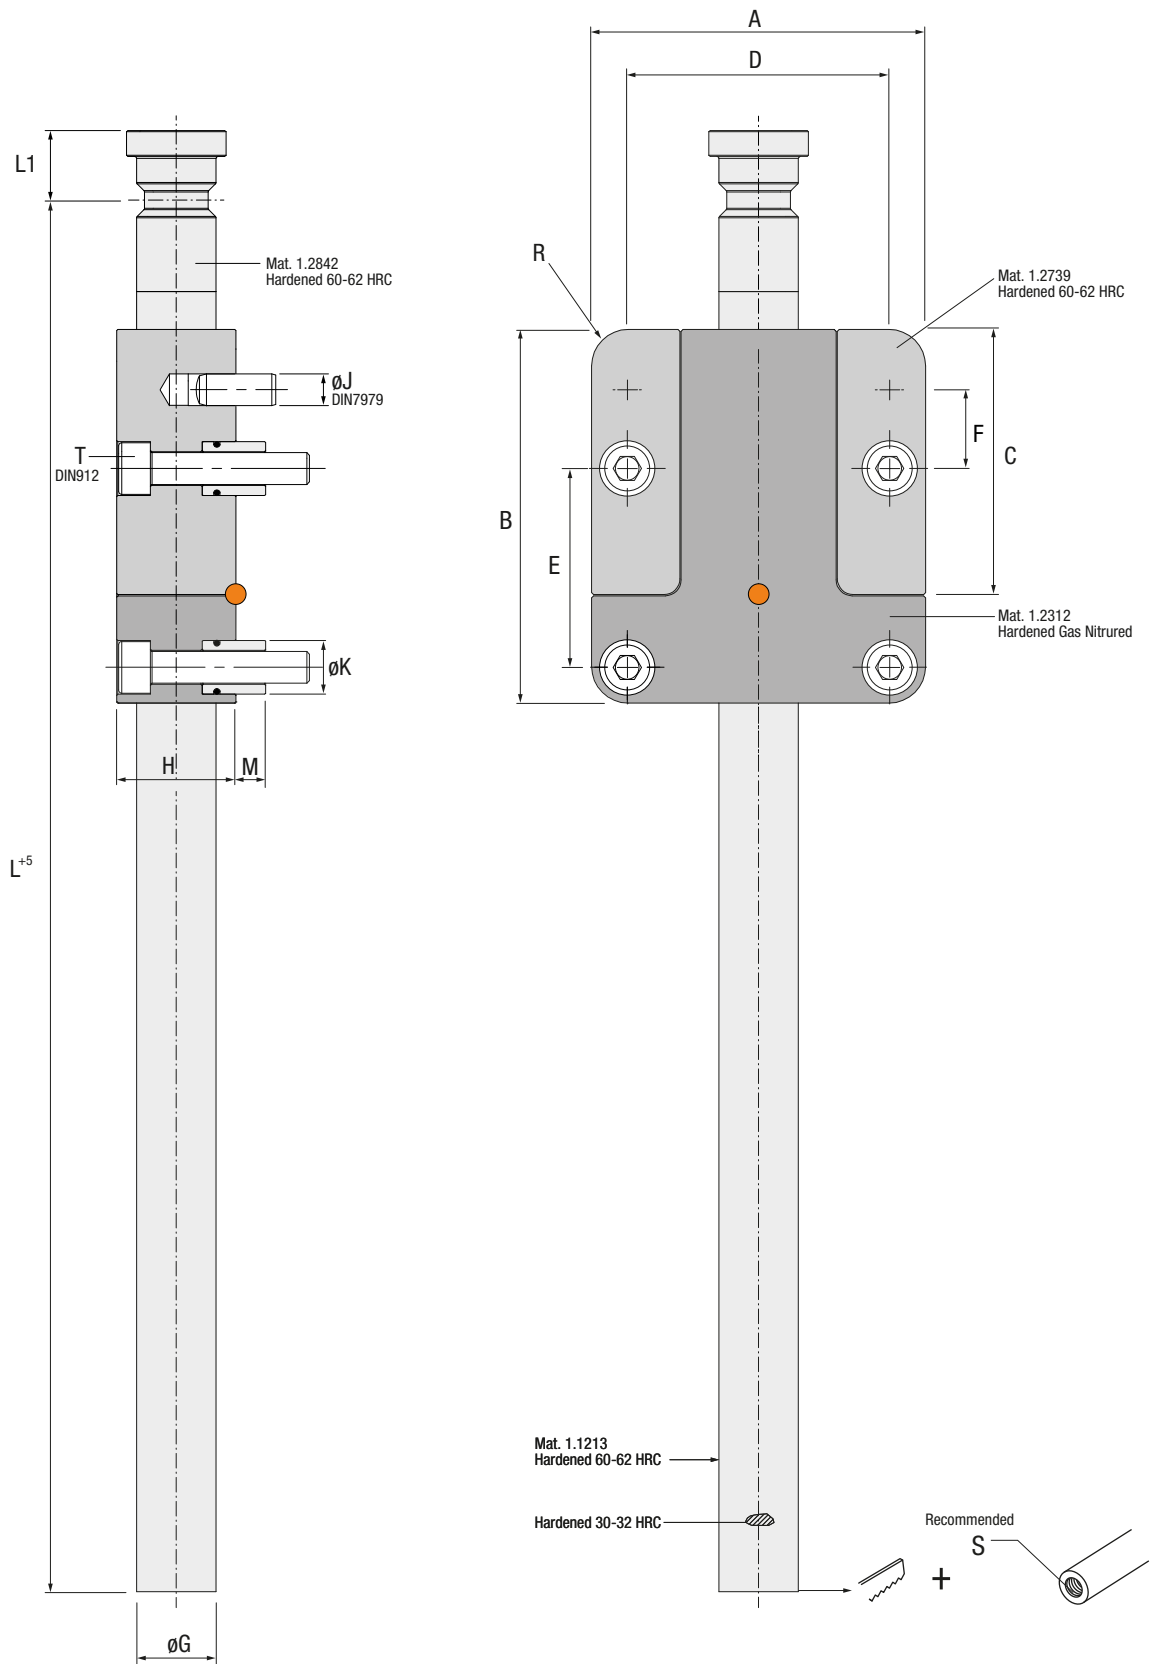

Ref.	A	B	C	D	E	F	G	H	J	K	L	L1	M	R	S	T	Min. Stroke	Max. Stroke	RF (N)
EY.140600	62	70	50	48	38	18	14	22	$\phi 6 \times 20$	10.5	348	13	5.5	7.2	M8	M6x30	6	30	4.000
EY.200800	84	94	67	66	50	26	20	30	$\phi 8 \times 20$	13.5	348	17.5	7.5	9.2	M12	M8x40	8	40	9.000
EY.321200	126	144	102	102	82	38	32	46	$\phi 10 \times 30$	18.5	530	27	11.5	12.5	M16	M12x65	14	60	20.000
EY.501600	174	200	140	140	113	53	50	64	$\phi 12 \times 40$	25	530	40	15.5	17	M24	M16x90	20	80	40.000

# INSTALLATION GUIDELINES

ES Consejos de Instalación DE Richtlinien zur Installation  
 IT Consigli di Installazione PT Instruções de Instalação FR Mode d'Installation



# EY

EJECTION

